



# FIXING TACTUM 15MXP

1

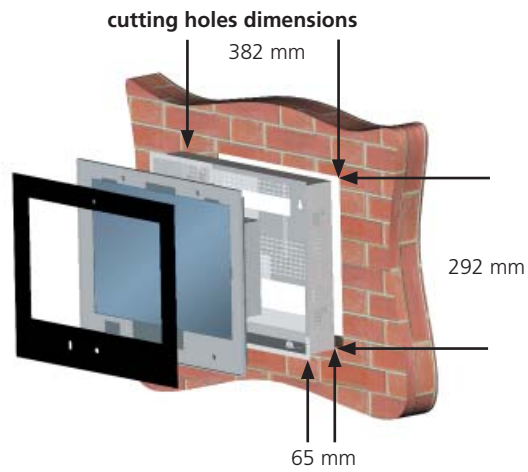

2

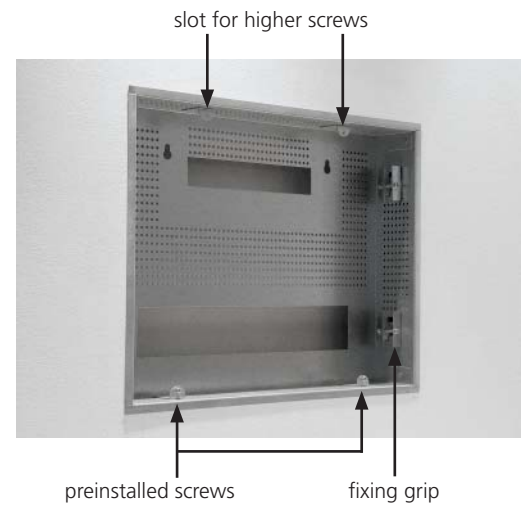


Position the two holes at the bottom of the screen on the two preinstalled screws of the wall box

3



4

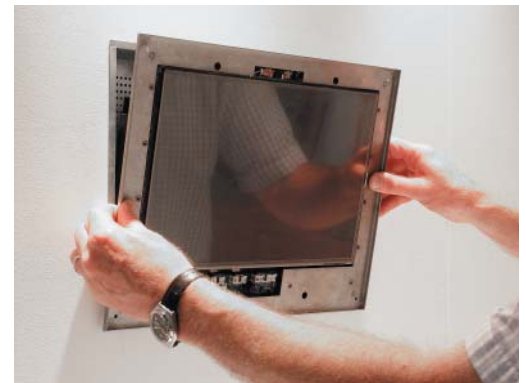

Position the black magnetic front panel

5



6



Use your finger nail to remove the magnetic front panel.

7



8





screw for camera vertical adjustment  
upper screw for lower tilt  
lower screw for higher tilt  
Lock on the opposite screw when final position is set

