

SONY D70/D100P COMMAND LIST

Pow on: 81 01 04 00 02 FF

Pow off: 81 01 04 00 03 FF

up: 81 01 06 01 03 02 03 01 FF

down: 81 01 06 01 03 02 03 02 FF

left: 81 01 06 01 03 02 01 03 FF

right: 81 01 06 01 03 02 02 03 FF

upleft :81 01 06 01 03 02 01 01 FF

upright: 81 01 06 01 03 02 02 01 FF

downleft: 81 01 06 01 03 02 01 02 FF

downright: 81 01 06 01 03 02 02 02 FF

stop: 81 01 06 01 03 02 03 03 FF

zoom:

放大: 81 01 04 07 02 FF

缩小 81 01 04 07 03 FF

Stop: 81 01 04 07 00 FF

Focus:

聚焦+: 81 01 04 08 03 FF

聚焦-: 81 01 04 08 02 FF

Stop: 81 01 04 08 00 FF

Auto focus: 81 01 04 38 02 FF

Manual focus: 81 01 04 38 03 FF

CAM- memory (p:memory number ,=0 to 5)

Reset: 81 01 04 3F 00 0p FF

Set: 81 01 04 3F 01 0p FF

Recall: 81 01 04 3F 02 0p FF