


Cisco TelePresence Remote Control

Function keys: Represents shortcuts and advanced functions. Each key reflects a soft key on screen.

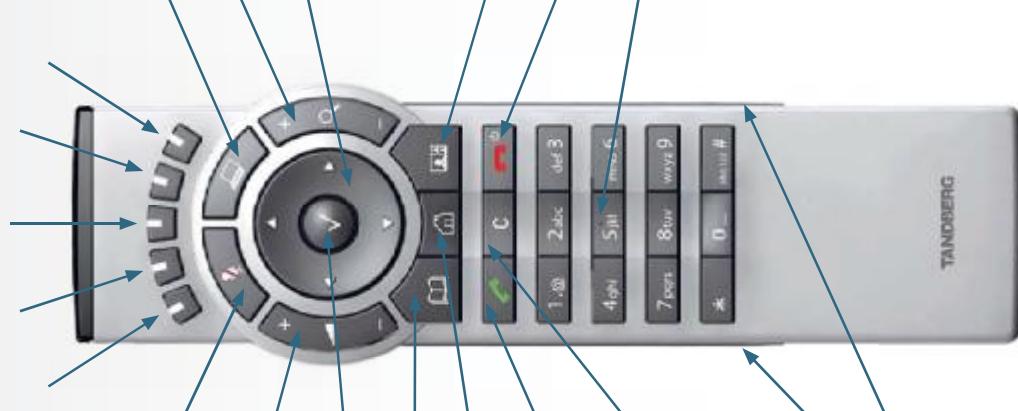

Microphone: Press the key to toggle the microphones on/off.

Volume: Press the + or - on the key to adjust the codec volume.

Mute: Press the - on the key to mute the volume during an incoming call.

OK>Select: Press the key to confirm your choice or selection.

Phone book: Press the key to display the local Phone book.

Home: Press the key to show the menu on screen.

INITIATE A CALL: Select a name from the Phone book or enter the name, number or URL and press the key to initiate the call.

SHORTCUT TO RECENT CALLS: Use the Call key as a shortcut to Recent Calls when the Call menu is not visible.

Clear: Press the key to remove characters in a text field.

Waking up the system
Grab the remote control and make sure your hand touches the rubber line sensors going along both sides of the remote control.
or: Touch any key on the remote control.

Presentation: Press the key to show/hide a presentation.

Zoom: Press the + or - on the key to zoom the camera in and out.

Arrows:

■ Up/Down: Use the and arrow keys to navigate in the menu.

■ Arrow Right: Press the arrow key to expand the selected menu item or to move to the right in a text field.

■ Arrow Left: Press the arrow key to go one step back in the menu or to move to the left in a text field.

Layout: Press the key to display the Layout menu, then select a view in the menu.

End call/Standy: Press the key to end a call, or when idle, press and hold the key to go into standby mode.

Alphanumeric keypad: Use the keypad in the same way as you would use a cellular phone.

- 0-9, a-z, period ., @, space, * : Press a key repeatedly to toggle between the options displayed on each key.
- abc/123 #: Press the # key to toggle between touch tones mode (long press), lower case characters and numbers.

IR transmitter range (DIP switch setting)

The IR transmitter has a short and long range. Open the battery cover and remove the batteries to set the DIP switch.

- Short range (1 m): Move the DIP switch down.
- Longer range: Move the DIP switch up.



Remote control key map

The Cisco TelePresence Remote Control 5 has the following button codes and IR signal parameters.

You will find a one page overview of the remote control on the next page.

Button codes - Remote control 5

Dec	Hex	Address	Button name
0	0		
1	1	0	Number 1
2	2	0	Number 2
3	3	0	Number 3
4	4	0	Number 4
5	5	0	Number 5
6	6	0	Number 6
7	7	0	Number 7
8	8	0	Number 8
9	9	0	Number 9
10	0A	0	Number 0
11	0B	0	*
12	0C	0	#
13	0D		
14	0E		
15	0F		
16	10		
17	11	0	Presenter
18	12		
19	13		
20	14		
21	15		
22	16	0	Zoom out
23	17	0	Zoom in
24	18		
25	19	0	Volume down
26	1A	0	Volume up
27	1B	0	Microphone off
28	1C		
29	1D	0	Arrow up
30	1E	0	Arrow down
31	1F	0	Arrow left

Button codes - Remote control 5

Dec	Hex	Address	Button name
32	20	0	Arrow right
33	21	0	Ok
34	22	0	Call
35	23	0	End call
36	24	0	Phone book
37	25	0	Layout
38	26	0	Clear
39	27		
-	-		
41	29		
42	2A	0	Soft key 1
43	2B	0	Soft key 2
44	2C	0	Soft key 3
45	2D	0	Soft key 4
46	2E	0	Soft key 5
-	-		
-	-		
-	-		
51	33	0	Home

IR Signal parameters

Name	Description
Protocol	Siemens SDA2208
Reference frequency	485 kHz
Address	4 and 7
IR wavelength	940 nm
IR carrier frequency	30 kHz